


XTL018-1 INSTRUCTION MANUAL


For 42-70" TV


If you have any questions along the way, just give us a call 1-800-460-0956 or mail to customerservice@x-mount.com. We're ready to help!


$\hat{m{\Lambda}}$ CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS.

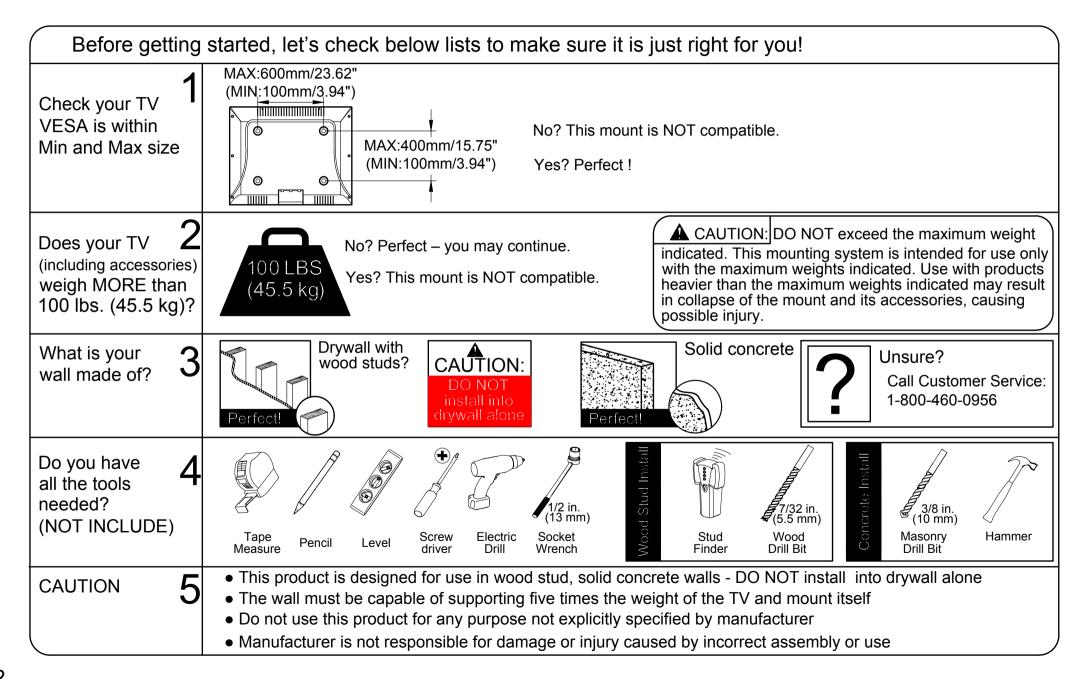



Dimensions

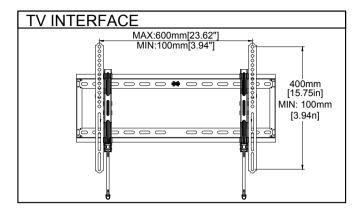


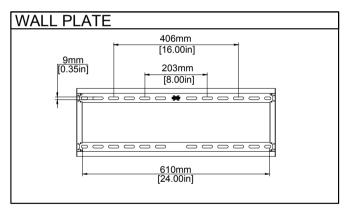


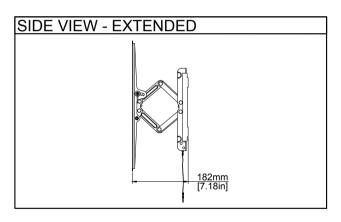

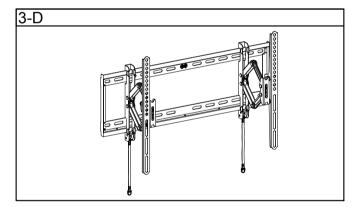

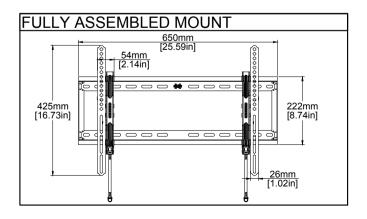

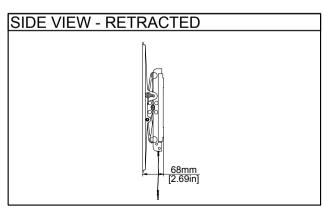

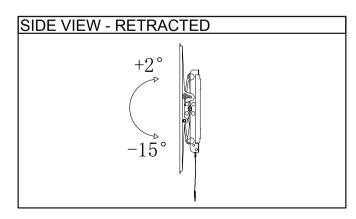


Parts and Hardware


▲ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service.


Never use damaged parts!


NOTE: Not all hardware included will be used.

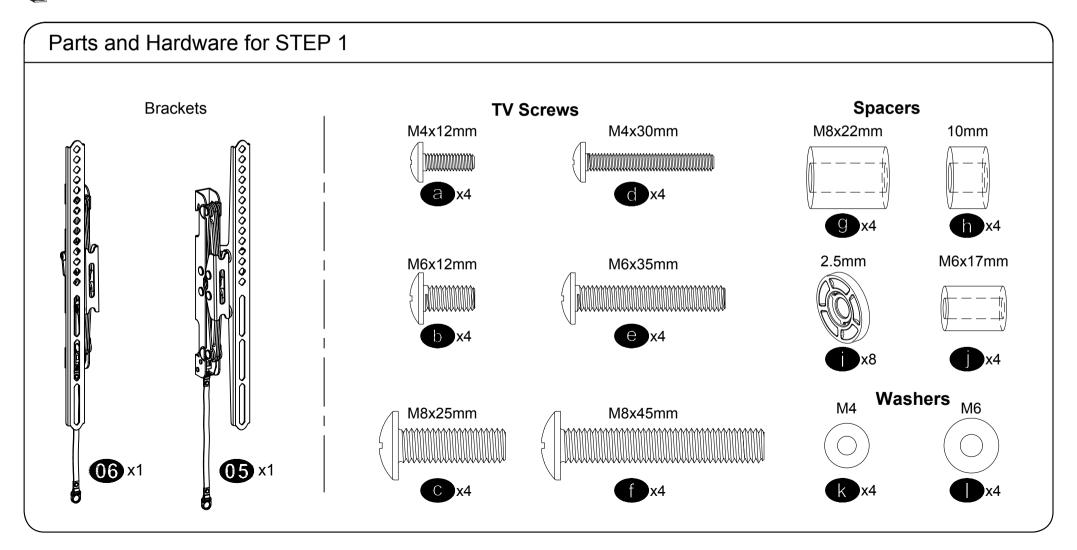


Parts and Hardware for STEP 2

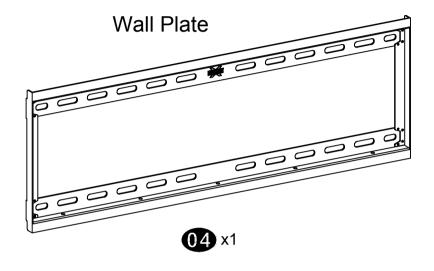


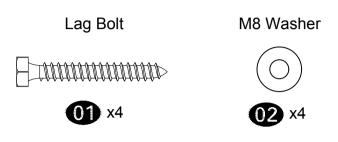

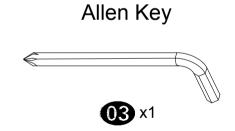


Mounting template

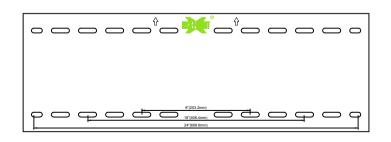

 


Contact us at telephone 1-800-460-0956 (USA) or mail to customerservice@x-mount.com. to have these additional pieces shipped directly to you.

STEP 1 Attach Brackets to TV

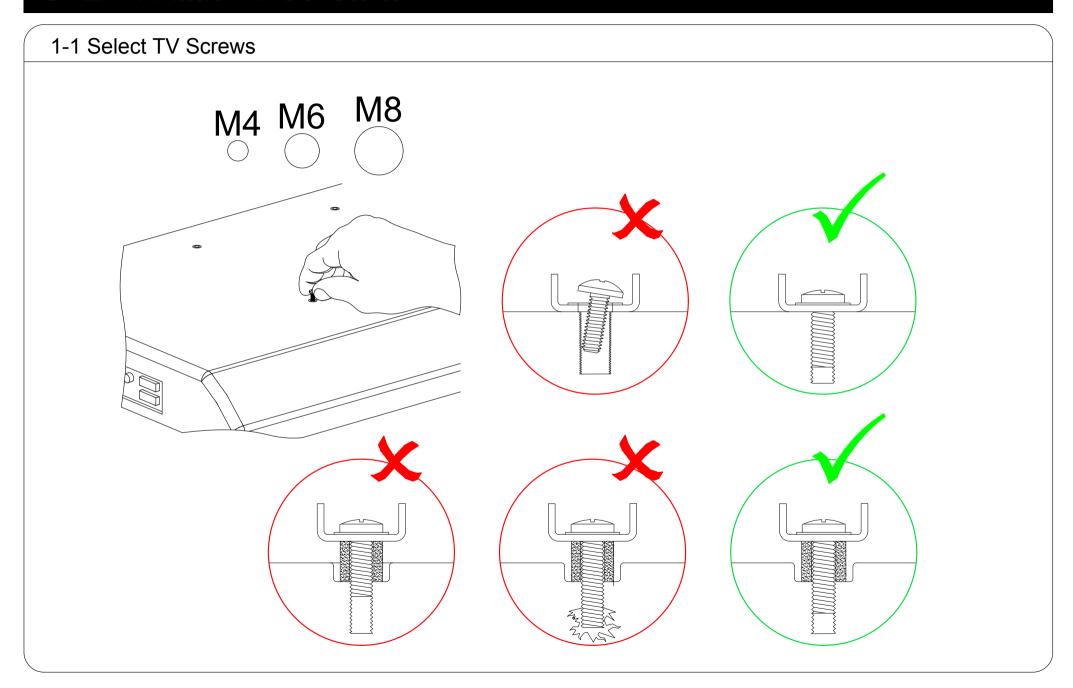


1-2 Figure out the suitable position of brackets


LOW MOUNTING HOLES

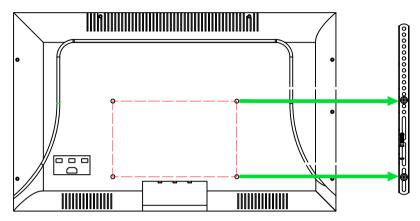


HIGH MOUNTING HOLES

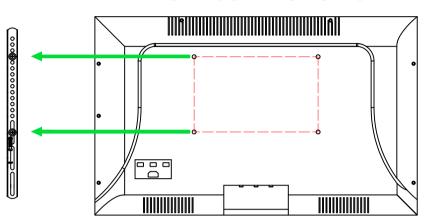

INSTALL UP/DOWN IF NEEDED

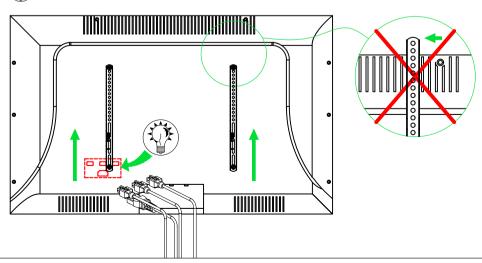


1 TV BRACKETS MUST BE LEVEL

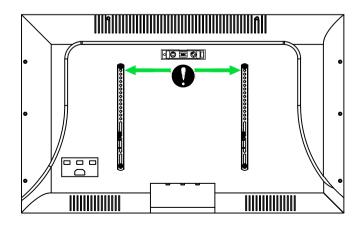


1-3 Need Spacer?

1-4 Attach the TV Plate


No, choose suitable screws and washers.

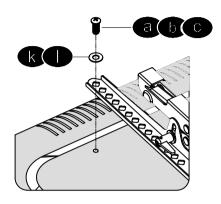

II Yes, choose suitable screws, washers and spacers.

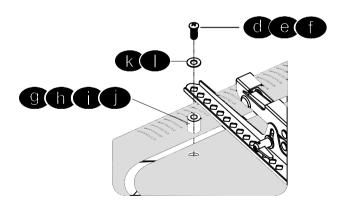


Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers(i), you have to remove the inner circle.

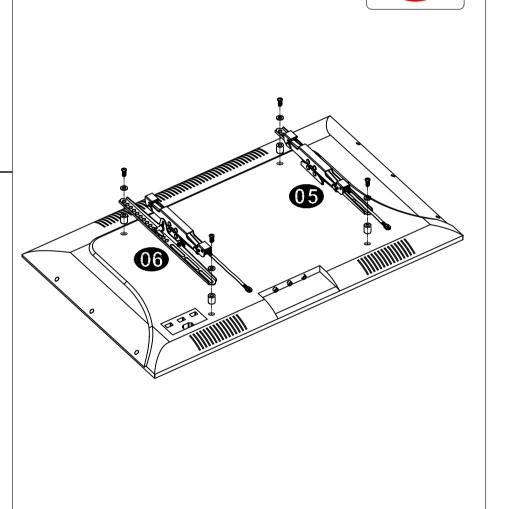


STEP 2A Attach Wall Plate to Wall Wood Stud Option

▲ CAUTION: Avoid potential personal injury or property damage!


- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Maximum horizontal space between fasteners: 24 in. (609.6 mm)
- Stud center must be verified
- 1. Locate your studs. Verify and mark the center of the stud by finding the stud edges using a thin nail, or an edge to edge stud finder.
- 2. Position the wall plate unit at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

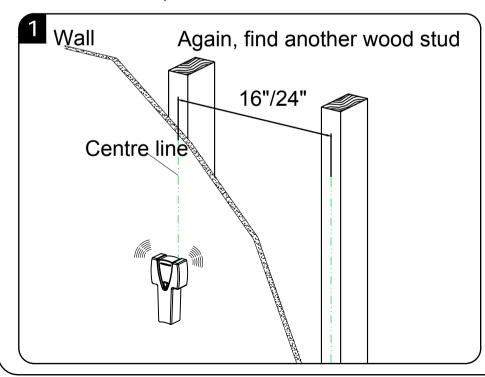


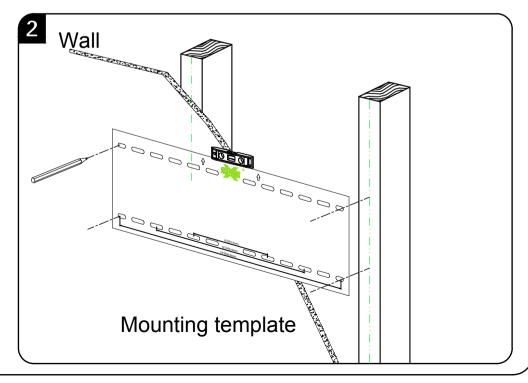

- 3. Drill pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.
 - IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm). Be sure to drill into the center of the studs.
- 4. Install wall plate **04** using lag bolts **01** and washers **02**. Tighten the lag bolts only until they are pulled firmly against the wall plate.
 - ▲ CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.

Go to STEP 3 on PAGE 13.

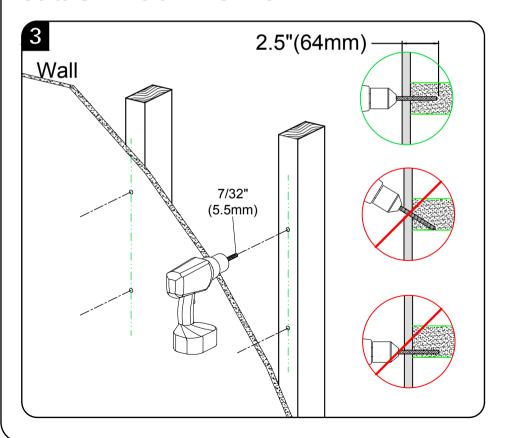


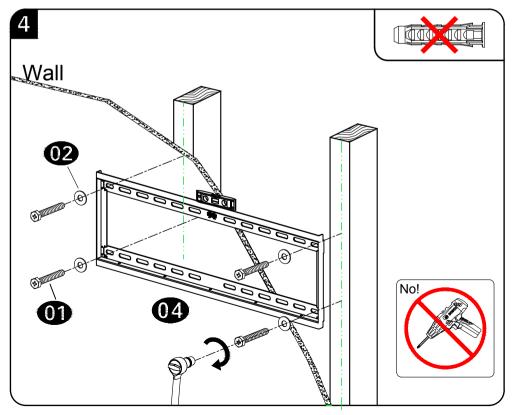


STEP 2B Attach Wall Plate to Solid Concrete Wall

▲ CAUTION: Avoid potential personal injury or property damage!


- Mount the wall plate assembly unit directly onto the concrete surface
- Minimum solid concrete thickness: 8 in. (203 mm)
- 1. Position the wall plate unit on the wall at your desired height. Level the wall plate and mark the hole locations.
- 2. Drill four pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.
 - ●IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm).

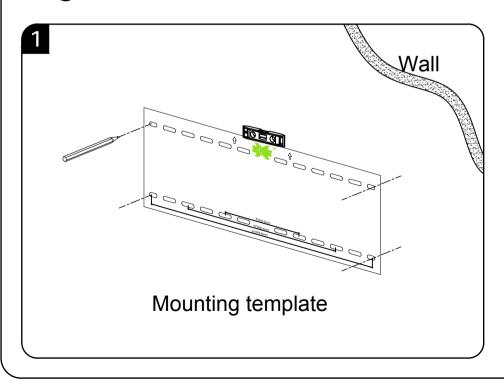


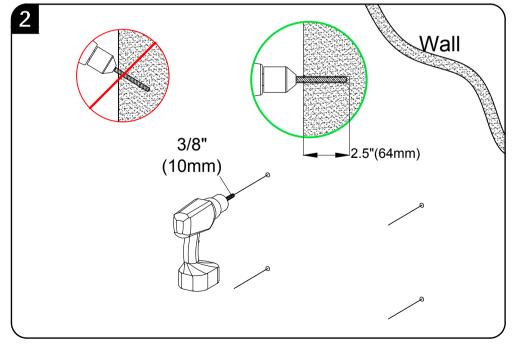

- 3. Insert anchors.
- ▲ CAUTION: Be sure the anchors are seated flush with the concrete surface.
- 4. Insert wall plate **04** using lag bolts **01** and washers **02**. Tighten the lag bolts only until they are pulled firmly against the wall plate.


▲ CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.

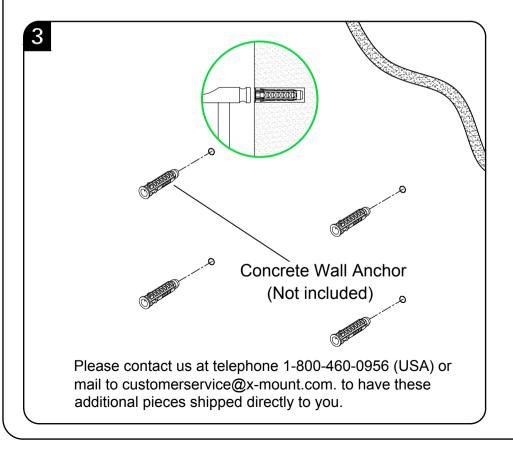

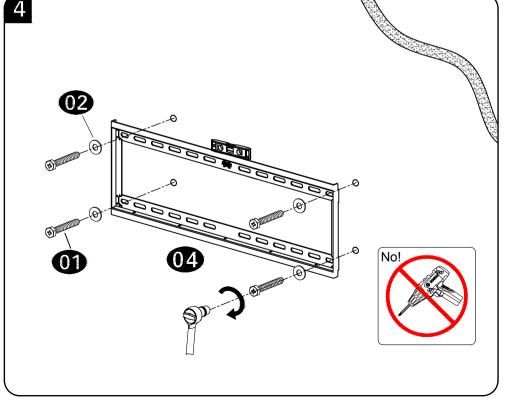


STEP 3 Wall Plate Installation Integrity Test

Before hanging TV, please try to pull the mount to make sure that it has been assembled on the wall tightly.

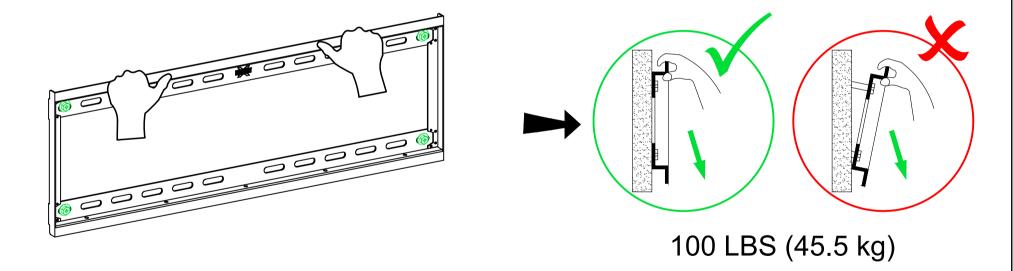

STEP 4 Hang and Secure TV to Wall Plate

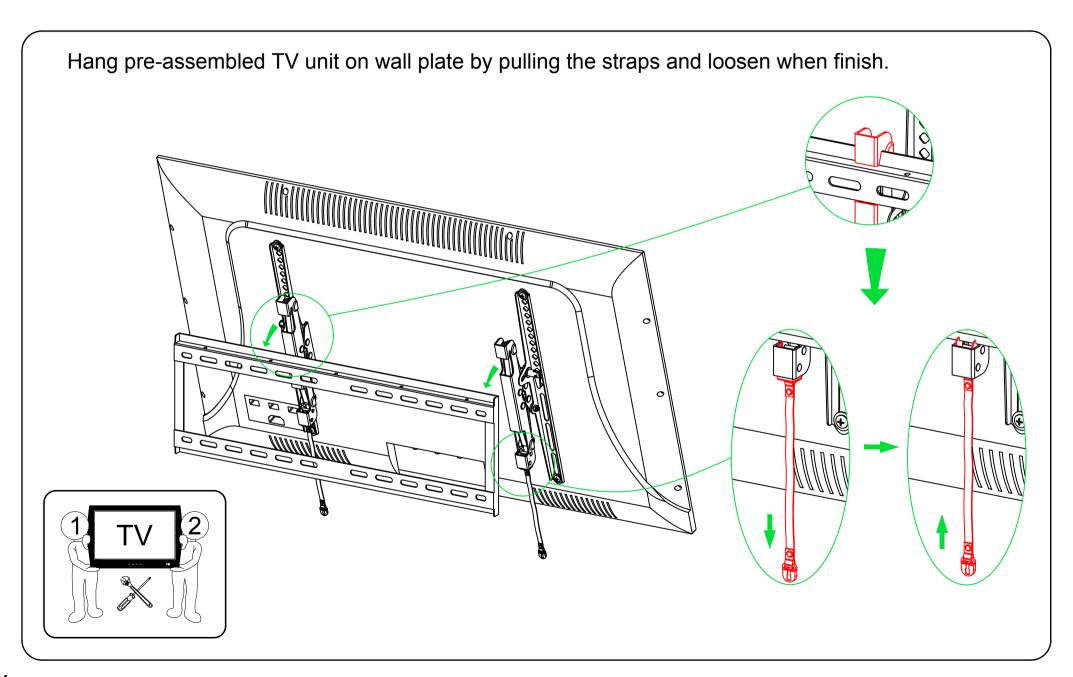

STEP 5 Adjustments

Tilting angle adjustment (+2°/-15°): Loosen the handles to tilt your TV at desired angle and fasten when finish. Handle +2° -15° -15°