


# XML025-01 INSTRUCTION MANUAL


For 37-90" TV


If you have any questions along the way, just message to us. We're ready to help!


### A CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS

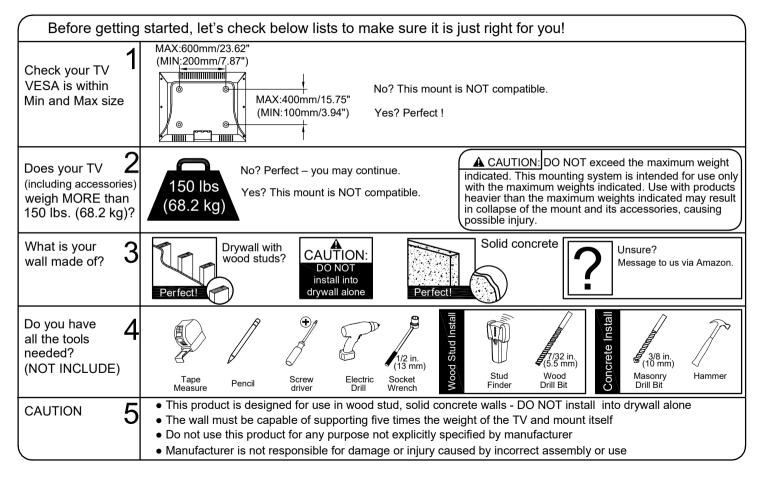



# **Dimensions**

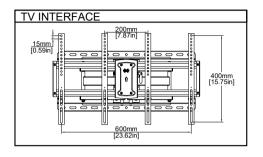


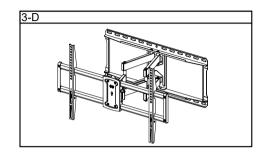


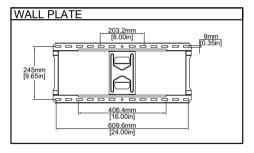


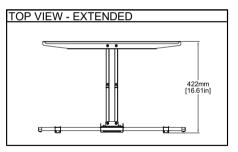

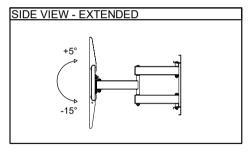

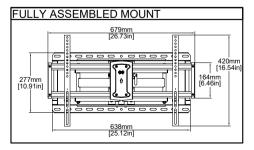

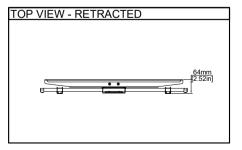

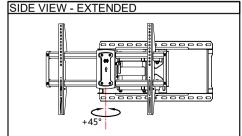


### Parts and Hardware


MARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service

Never use damaged parts!


NOTE: Not all hardware included will be used.

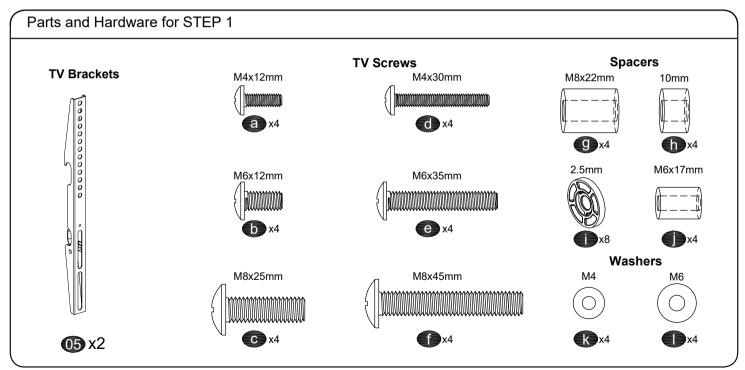

#### Parts and Hardware for STEP 2

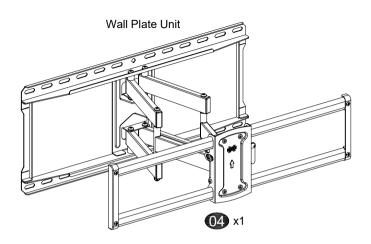

#### Mounting template

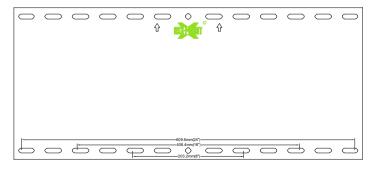

#### Lag Bolt M8x60mm



#### Concrete wall anchor (NOT INCLUDED)



Contact us and message to us to have these additional pieces shipped directly to you.

#### M6x16mm Bolt













Velcro x3

# STEP 1 Attach Brackets to TV

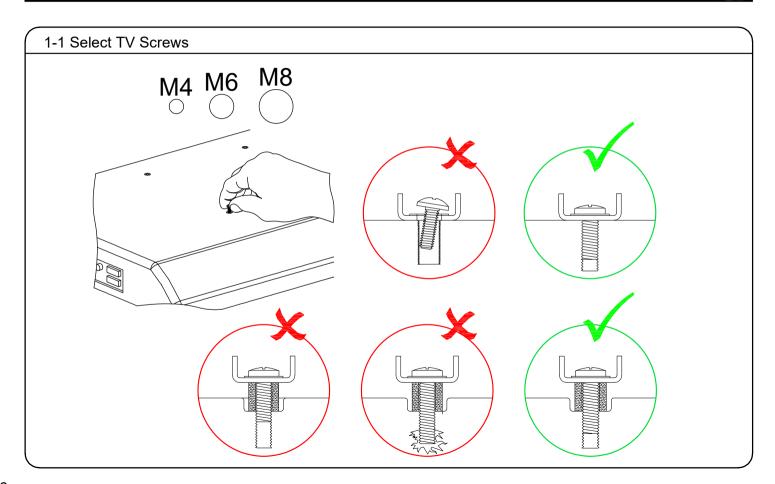



#### 1-2 Figure out the suitable position of brackets



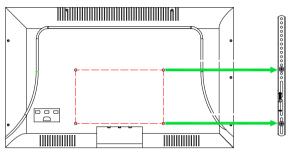


HIGH MOUNTING HOLES

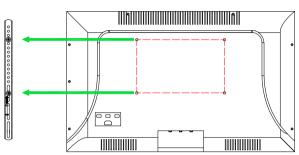

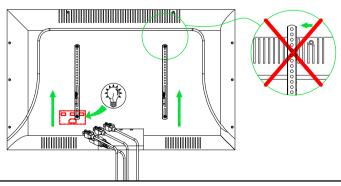


#### TV BRACKETS MUST BE LEVEL

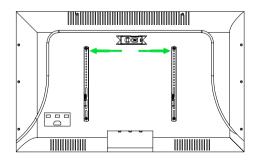


### 1-3 Need Spacer?

#### 1-4 Attach the TV Plate



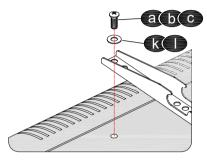


III Yes, choose suitable screws, washers and spacers.

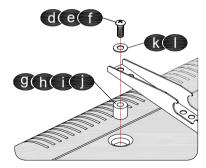

Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers( i ), you have to remove the inner circle.




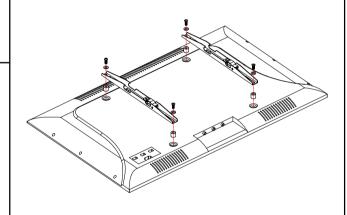


## STEP 2A Attach Wall Plate to Wall Wood Stud Option

### ▲ CAUTION: Avoid potential personal injury or property damage!


- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Maximum horizontal space between fasteners: 24 in. (609 mm)
- Stud center must be verified
- 1. Locate your studs. Verify and mark the center of the stud by finding the stud edges using a thin nail, or an edge to edge stud finder.
- 2. Position the mounting template at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

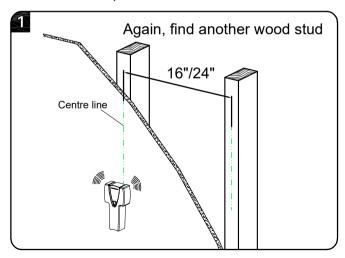


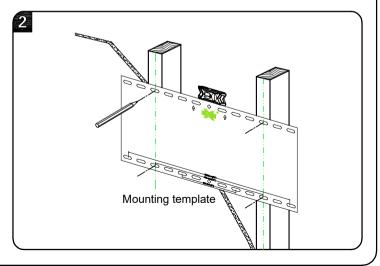

- 3. Drill pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.
  - IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm). Be sure to drill into the center of the studs.
- 4. Install wall plate using four lag bolts Tighten the lag bolts only until they are pulled firmly against the wall plate.
- A CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.


Go to STEP 3 on PAGE 13.

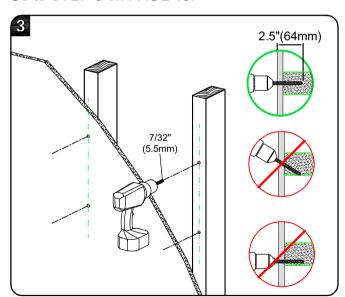


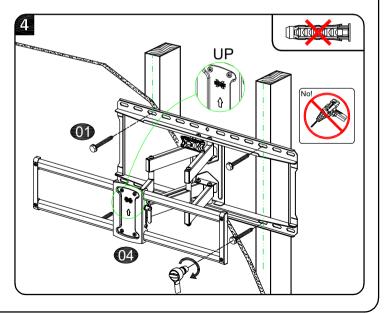

### STEP 2B Attach Wall Plate to Solid Concrete Wall

- A CAUTION: Avoid potential personal injury or property damage!
  - Mount the wall plate assembly (14) directly onto the concrete surface
  - Minimum solid concrete thickness: 8 in. (203 mm)
- 1. Position the mounting template on the wall at your desired height. Level the wall plate and mark the hole locations.
- 2. Drill four pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.
  - IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm).

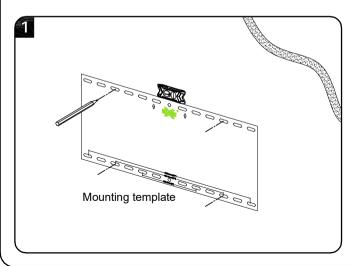

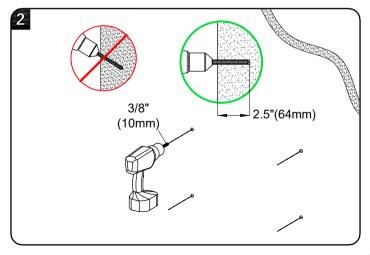



3. Insert four anchors.

▲ CAUTION: Be sure the anchors are seated flush with the concrete surface.

4. Insert wall plate (14) using four lag bolts (11). Tighten the lag bolts only until they are pulled firmly against the wall plate.


▲ CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.

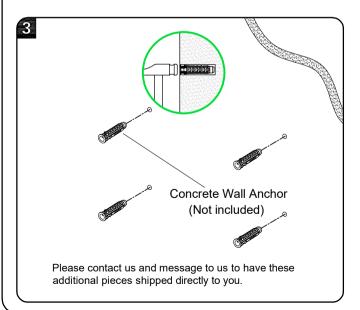

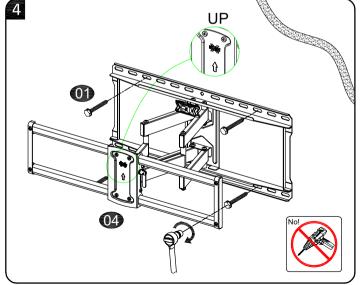

# STEP 3 Wall Plate Installation Integrity Test


Before hanging TV, please try to pull the mount to make sure that it has been assembled on the wall tightly.

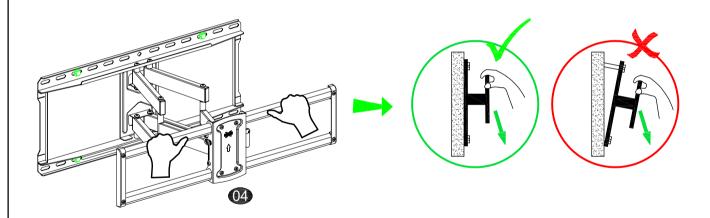

# STEP 4 Hang and Secure TV to Wall Plate

Hang TV/bracket assembly onto wall plate, wrap clips on bracket around extension arms and tighten them using bolts 02. 

# STEP 5 Adjustments

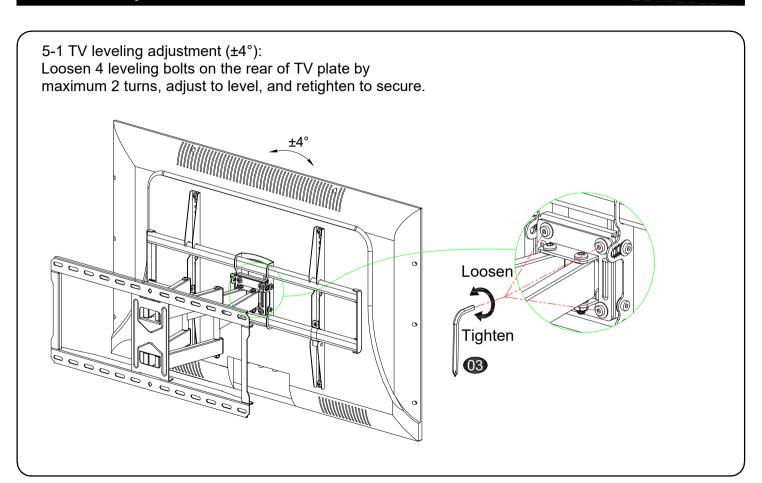

5-2 Tilting angle adjustment (+5°/-15°): Loosen handle and tilting bolt, adjust TV to your desired position, then tighten handle and tilting bolt. Put the handle level when finish. Handle Level +5° +5° -15° Tilting bolts Tilting bolts -15° Tighten Tighten Loosen Loosen

